



Antenna Mounting Kit

MT-DA-02


Hard Ceiling Mount for IX-MJN-V3P/IXD-360V03N0-54

Hard Ceiling Installation Guide


- 1) Make a hole or clearance for the mount. The minimum clearance is 3.94"x 2.17".
- 2) The maximum clearance is 4.33"x2.56" rectangular or 4.33" diameter circular hole as shown below.

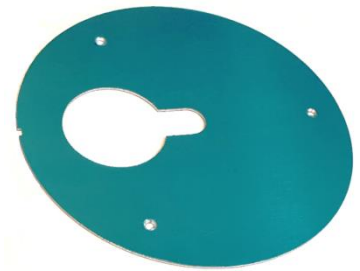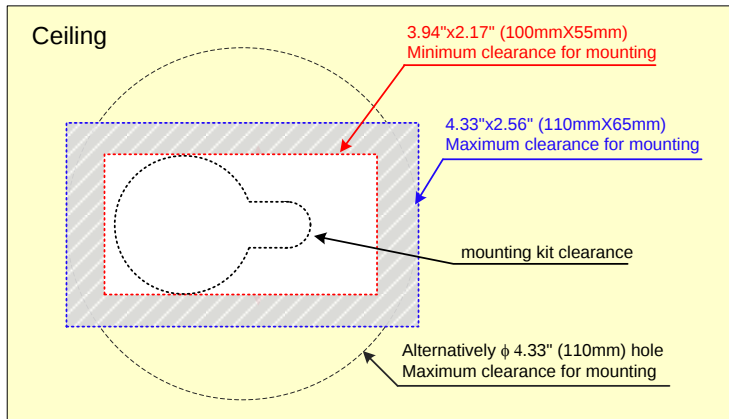


- 3) Adjust the mounting nut position (white plastic) to hold the antenna securely after attaching with the bracket. Keep the mounting nut position and remove the bracket from the antenna.

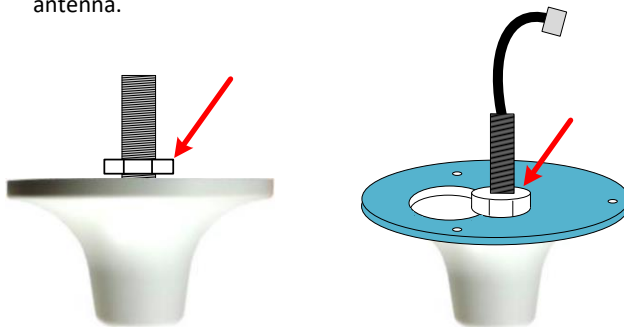

- 4) Attach the bracket to the ceiling with three screws.

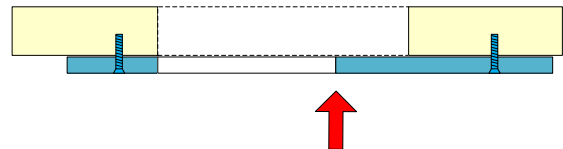

- 5) Insert the antenna into the ceiling and then push it in the direction as shown in the illustration below.

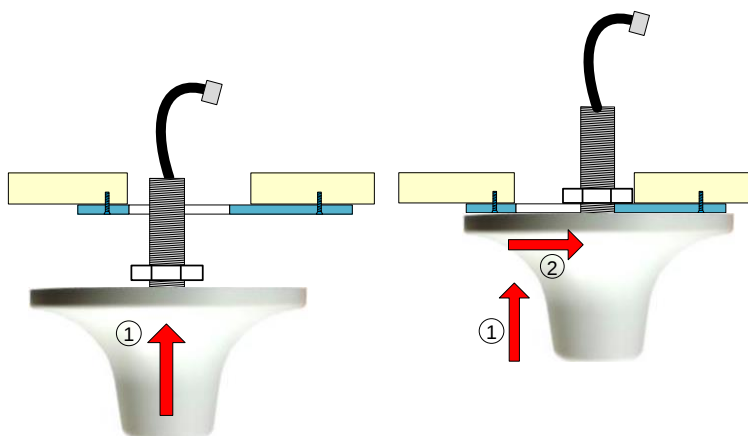

* Unmounting procedure

- i) Please find a small notch around the circle and pull the antenna towards the notch around 1.5" as shown below by the red arrow.
- ii) Pull down the antenna.

